



RUST BUSTER

RB7033
Rear Cab Mount
2009-2014 Ford F-150
Single Cab – 8ft. Bed



VIDEO AVAILABLE



REQUIRED TOOLS

Jack Stands or Lift
Mig Welder
Paint/Primer
Hand Grinder
Cutting Wheel or Torch
Welding Gloves
Welding Hood/Shield
Ear & Eye Protection
Sockets & Ratchet
Fire Extinguisher
Hammer

KIT CONTAINS

Rear Cab Mount
Mounting Plate

QTY

1
1



RUST BUSTER

RB7033 Rear Cab Mount 2009-2014 Ford F-150 Single Cab – 8ft. Bed

1) **PREPARING YOUR VEHICLE**

Begin by disconnecting your battery prior to starting your installation.

Inspect your vehicle for leaking fuel lines, fuel tank and engine components. If you have fuel leaks repair all leaks prior to starting your installation. If your fuel tank is near your welding area **remove your tank prior to welding.**

Remove all combustible items above the work area such as seats, carpets, padding, etc.

Keep all flammable materials away from the vehicle work area.

2) **PREPARING YOUR WORKSTATION**

Keep a fire extinguisher close by in the case of fire and make sure you always have a designated “Fire Watch” to assist during the cutting or welding phases.

Abide by all apprenticed welding safety standards and practices.

Always use appropriate welding eye protection, ear protection, and work and fire safety gloves during the installation and within the work area.



WARNING!

If you are unsure on how to perform the installation or how to operate any of the required tools listed above, it is **HIGHLY** advised that you enlist the work of a certified welder/installer.

Failure to follow proper safety precautions and instructions may result in serious injury. **The user assumes all liability when installing the product.**



RUST BUSTER

RB7033 Rear Cab Mount 2009-2014 Ford F-150 Single Cab – 8ft. Bed

3) PREPARING FOR YOUR INSTALL

Remove or lift your cab out of the way. Remove your cab mounts bushing.

4) CUT

Cut off the factory rear cab mount and any obstructions in the work area.




Grind the frame free of rust and debris, revealing bare metal.



Spray the work area with a weld-through primer to help prevent against rust development.

5) WELD

Take your replacement rear cab mount and the mounting plate. Line up the plate with the bottom back edge of the cab mount. This is where the cab mount will sit, with the plate aligning with the top of your frame rail.

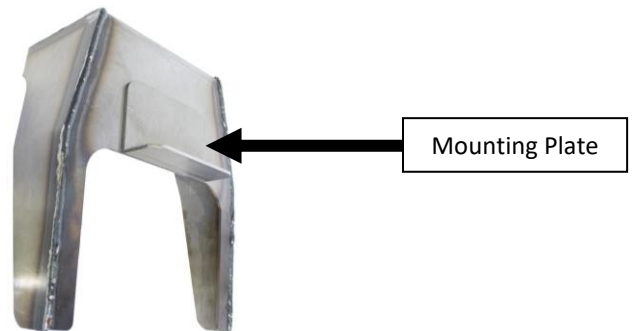

Following proper welding procedures, tac weld your plate to the back of your rear cab mount.

Then, hold your mount up to the frame using the factory mounts silhouette to help with the alignment. You can measure opposite side of your vehicle for reference.





RUST BUSTER

RB7033 **Rear Cab Mount** **2009-2014 Ford F-150** **Single Cab – 8ft. Bed**


Following proper welding procedures, tac weld your rear cab mount onto the frame before welding it on fully. Weld 100% around all edges.



6) PAINT

Paint the part with primer or other rust inhibitor to help prevent or reduce the risk of rust formation.

We recommend our Rust Buster Rust Converter & Primer Spray Paint (RB9917).

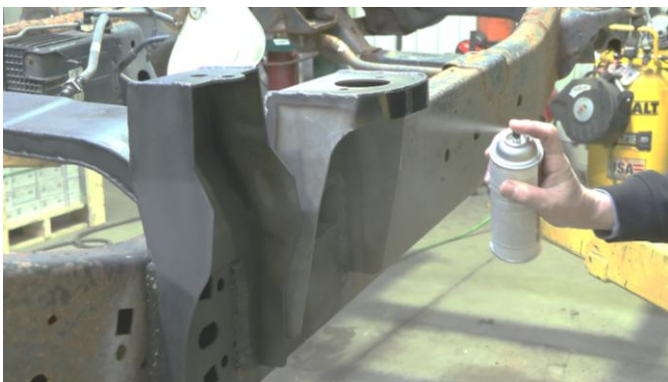

7) REINSTALL

Reinstall your cab mounts bushing and cab.