



RUST BUSTER

RB7518
Fuel Tank Crossmember
2006-2010 Hummer H3



REQUIRED TOOLS

Jack Stands or Lift
Mig Welder
Paint/Primer
Hand Grinder
Cutting Wheel or Torch
Welding Gloves
Welding Hood/Shield
Ear & Eye Protection
Sockets & Wrench
Fire Extinguisher
Support
Mallet

KIT CONTAINS

Fuel Tank Crossmember

QTY

1



RUST BUSTER

RB7518 Fuel Tank Crossmember 2006-2010 Hummer H3

1) PREPARING YOUR VEHICLE

Begin by disconnecting your battery prior to starting your installation.

Inspect your vehicle for leaking fuel lines, fuel tank and engine components. If you have fuel leaks repair all leaks prior to starting your installation. If your fuel tank is near your welding area **remove your tank prior to welding.**

Remove all combustible items above the work area such as seats, carpets, padding, etc.

Keep all flammable materials away from the vehicle work area.

2) PREPARING YOUR WORKSTATION

Keep a fire extinguisher close by in the case of fire and make sure you always have a designated "Fire Watch" to assist during the cutting or welding phases.

Abide by all apprenticed welding safety standards and practices.

Always use appropriate welding eye protection, ear protection, and work and fire safety gloves during the installation and within the work area.



WARNING!

If you are unsure on how to perform the installation or how to operate any of the required tools listed above, it is **HIGHLY** advised that you enlist the work of a certified welder/installer.

Failure to follow proper safety precautions and instructions may result in serious injury. **The user assumes all liability when installing the product.**



RUST BUSTER

RB7518 Fuel Tank Crossmember 2006-2010 Hummer H3

3) PREPARING FOR YOUR INSTALL

Remove or lift your bed out of the way.

4) CUT

Cut out your factory fuel tank crossmember with a torch or other cutting tool.



Grind the frame free of rust and debris, revealing bare metal.




5) WELD

Use the old part's silhouette on the frame rails to help align your new crossmember. Spray the work area with a weld through primer to help prevent against rust development.



Following proper welding procedure, tack weld your crossmember into place before welding it on fully. Weld 100% around all edges.

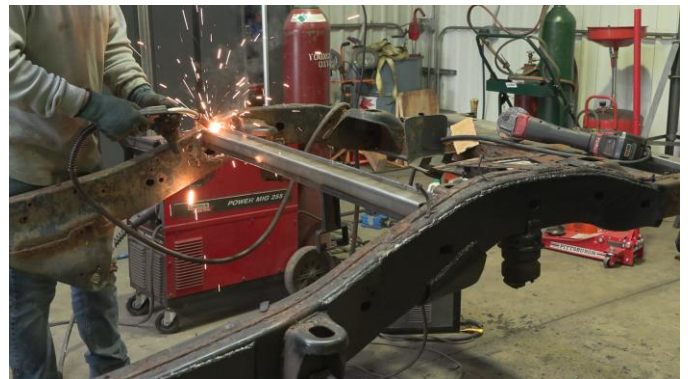



RUST BUSTER

RB7518 Fuel Tank Crossmember 2006-2010 Hummer H3

6) **PAINT**

Paint the part with primer or other rust inhibitor to help prevent or reduce the risk of rust formation.

We recommend our Rust Buster Rust Converter & Primer Spray Paint (RB9917).



7) **REINSTALL**

Reinstall the fuel tank and bed.